



Labcheck Next Generation

Guía de inicio rápido

Personalización del sistema

Pantalla de la página inicial



Home

Samples

Equipment

Re

Paso 1:

Para configurar los Elementos que desea desplegar en su sección "Home" (Página inicial), haga clic en "Home Page Settings" (Valores de la página inicial).

Home Page Settings

Paso 2:

Seleccione los Widgets (Elementos) que desea desplegar marcando las casillas apropiadas, luego haga clic en "Save" (Salvar).

Visible Widgets

Show/Hide Widgets

- Component Sample Frequency Report
- Critical Conditions
- Recent Samples by Severity
- Sample Turnaround
- Quick Links
- Alerts

Save

Cancel

Disposición de los Elementos



My Control Panel

Welcome Cary

Castrol welcomes you to the new look and functionality of Castrol Labcheck

Quick Search

Para cambiar la ubicación de un Elemento, simplemente arrástrelo y suéltelo en la nueva ubicación.

- [Unviewed Critical \(2\)](#)

- [Unviewed Abnormal \(1\)](#)

Equipment Actions


- [Units overdue for sampling \(0\)](#)

- [Units due for sampling \(0\)](#)

Quick Links


Recent Samples by Severity

All Samples

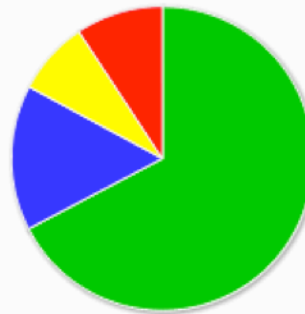

■ A ■ B ■ C ■ D


Component Sample Frequency Report

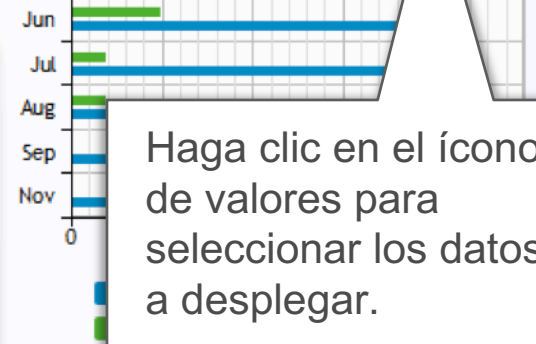

Haga clic en el ícono de valores para seleccionar los datos a desplegar.

Sample Turnaround

Sample Turnaround

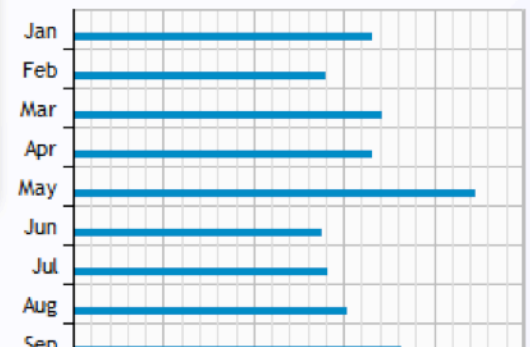

Configuración de su "Inbox" (Buzón electrónico)



Home

Samples

Samples

Inbox Search

Clear from Inbox

Inbox Settings

Download Data

Component

Unit ID

Sampled Date

Severity

Condition

Worksite

Customer

Make / Model

Serial

Sample Number

Oil Age

Unit Age

Sample Number

Sample Number

Sample Number

Sample Number

Sample Number

Sample Number

Paso 1:

Seleccione "Inbox Settings" (Valores el buzón electrónico) para personalizar los títulos de las columnas del buzón electrónico y el rango de fechas.

Paso 2:

Seleccione cuánto tiempo las muestras deben permanecer en el buzón electrónico antes de borrarlas.

Paso 3:

Seleccione los títulos de las columnas que desea desplegar.

Paso 4:

Haga clic en "Save" (Salvar) para guardar sus preferencias.

Inbox Settings

Date Range

Last Year

Show/hide columns

Component

Unit ID

Sampled Date

Severity

Condition

Worksite

Customer

Make / Model

Serial

Sample Number

Oil Age

Unit Age

Save

Cancel

My Account

Log Out



ENGINE

2023

Nov 1



TRANS-AUTO

LV-4

Nov 0



ENGINE

2011

Nov 09 2011

Acceptable

SHOP

American Paving Corp.

CHI20111118

Ordenamiento y clasificación de datos



Samples

Inbox Search






 Clear from
Inbox

 Inbox
Settings

 Download
Data

Sample Inbox



<input type="checkbox"/>	Component	Unit ID	Sampled Date	Severity	Condition	Worksite	Customer	Sample Num
<input type="checkbox"/>	ENGINE	4010	02 2011		Wear	SHOP	American Paving Corp.	CHI20110925
<input type="checkbox"/>			26 2011		Wear	SHOP	American Paving Corp.	CHI20110925
<input type="checkbox"/>			16 2011		Fuel/Low Viscosity	SHOP	American Paving Corp.	CHI20110801
<input type="checkbox"/>			16 7		Wear	SHOP	American Paving Corp.	CHI20110801
<input type="checkbox"/>	ENGINE	3809	Se		Dirt/Wear			
<input type="checkbox"/>					Oxidation			
<input type="checkbox"/>					Soot/High Viscosity			
<input type="checkbox"/>					Acceptable			
<input type="checkbox"/>					Acceptable	SHOP	American Paving Corp.	CHI20111111
<input type="checkbox"/>					Acceptable	YORK PA	Abel Construction Company Inc	CHI20111122
<input type="checkbox"/>					Acceptable	SHOP	American Paving Corp.	CHI20111111
<input type="checkbox"/>							Abel Construction	

Haga clic en el título de la columna para clasificar los datos.

Este triángulo indica cuál es la columna y datos que se están clasificando. El triángulo apunta hacia abajo si los datos están en orden descendente o hacia arriba si están en orden ascendente.

Para reordenar columnas, arrástrelas y suéltelas en la nueva posición. El sistema salvará automáticamente la preferencia.

Configuración de su pantalla de búsqueda



Home

Samples

Equipment

Reports

Preferences

Admin

Samples

Inbox **Search**

Quick

Download
Data

Display
Report

**Manage
Columns**

Saved Searches

Go

Manage

Paso 1:

Desde la sección "Samples" (Muestras), haga clic en "Search" (Buscar).

Paso 2:

Seleccione "Manage Columns" (Gestionar columnas).

Paso 3:

Seleccione los campos a desplegar y haga clic en "Save" (Salvar).

Manage Columns

Severity

Sampled Date

Unit ID

Unit Model

Component Make

Component Reference No.

Worksite

State

Oil Manufacturer

Oil Grade

Sample Number

Received Date

Unit Make

Component

Component Model

Customer

City

Zip Code

Oil Brand

Condition

Save

Cancel

Component Make

Mack

Component Model

AI 400 A

Caterpillar

C-1:

Perkins

-

Preferencias de comunicación



User Preferences

[Communications](#)

[My Tests](#)

[General](#)

Communication Preferences

Notifications and Alerts

EMail

Email Address

Format Links to Sample Details
 PDF Attachments

Severity Threshold

Frequency

Fax

Fax Number

Severity Threshold

Frequency

Text Message

Seleccione las casillas de verificación apropiadas para actualizar las preferencias de comunicación.

Seleccione los criterios para las notificaciones.